


## CROSS-SECTIONAL VIEW OF WHEEL & TIRE

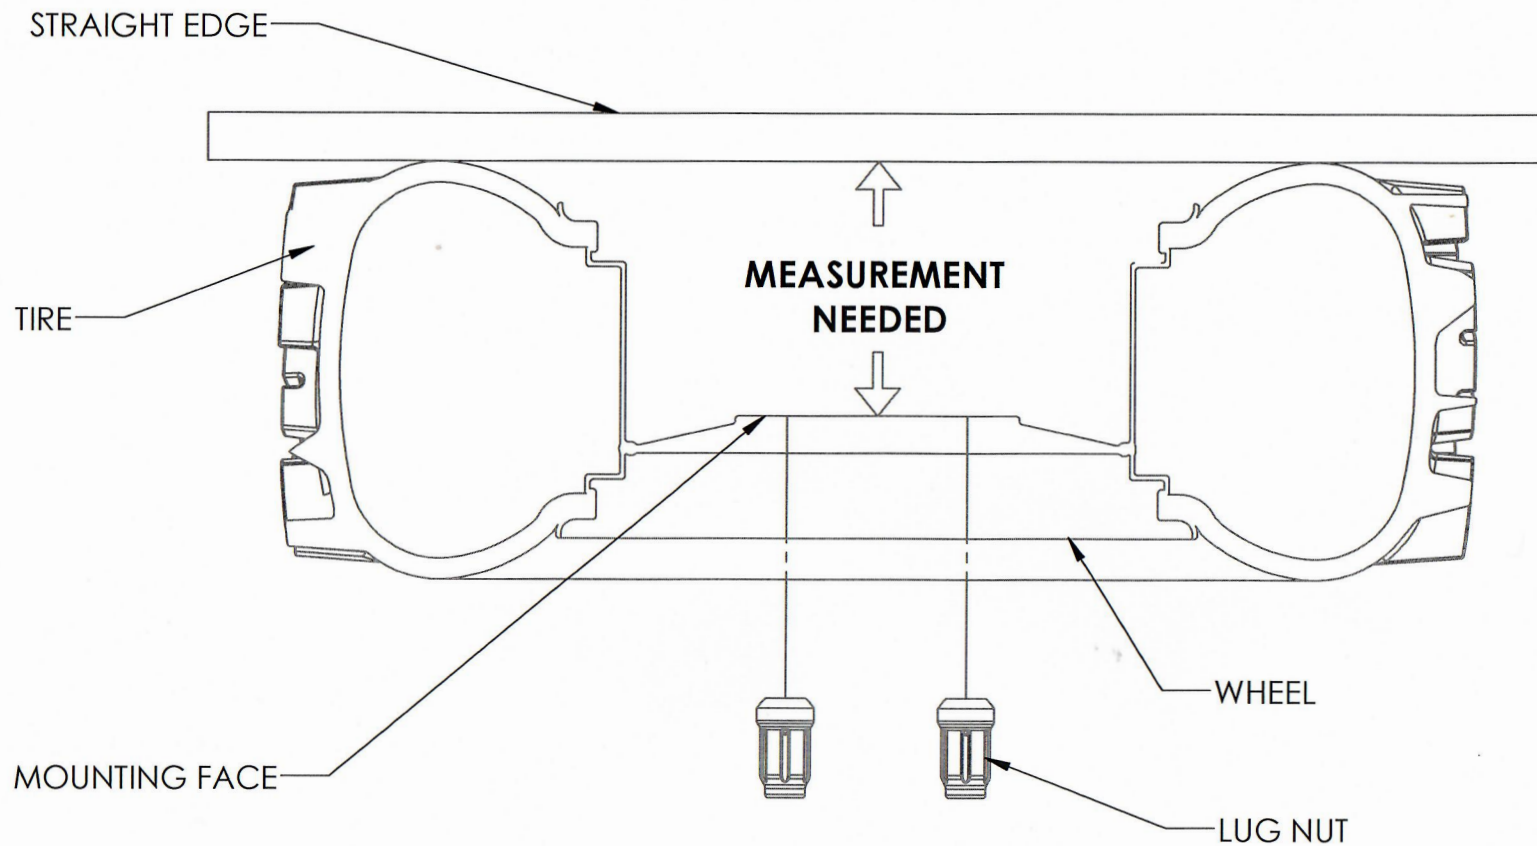

### **DIRECTIONS TO FIND NEEDED MEASUREMENT:**

1. LAY STRAIGHT EDGE ACROSS TIRE
2. MEASURE DOWN FROM STRAIGHT EDGE TO MOUNTING FACE