




Installation Instruction ---- Polaris RZR PRO XP (2020+) Aluminum Roof


Hardware Pack Contents:

1. 8pcs Spacer-Roof
2. 1pc Panel-Roof, Aluminum
3. 12pcs Washer-Rubber
4. 8pcs Allen Bolts
5. 8pcs Clip-U Speed Nuts

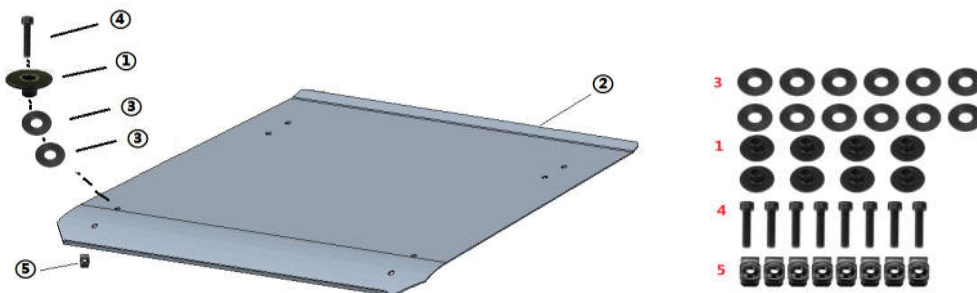


Installation:

1. Install 8 pcs Clip-U Speed Nuts ⑤ onto ROPS. as the below picture:
 Convex part of each nut should be aligned with the mounting hole of the upper mounting plate.

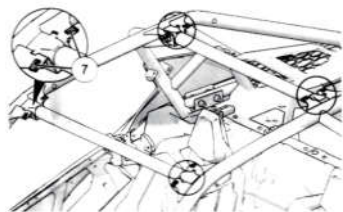


2. Regarding the front of four holes, put 1pc Allen Bolt ④, 1pc Spacer ① and 2 pcs Washer-Rubbers ③ for each hole;

Note: please do not tighten these bolts at this time.

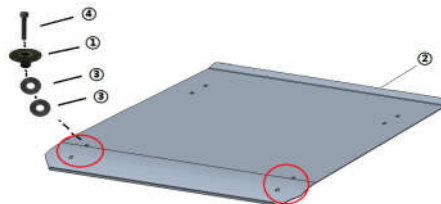


3. With the front of roof panel ② secure to vehicle ROPS, begin to slowly pull roof panel ② back so that it molds to ROPS curvature.

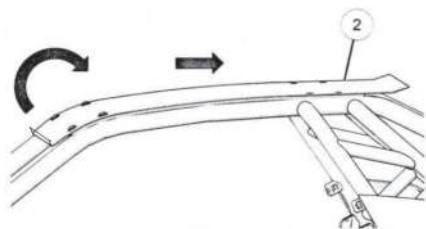

4. Ensure the foams are aligned with ROPS on all four sides, to prevent the roof from slipping and moving.



5. On the rear four holes, put 1pc Allen Bolt ④, 1pc Spacer ① and 1 pcs Washer-Rubber ③ for each hole; as shown:

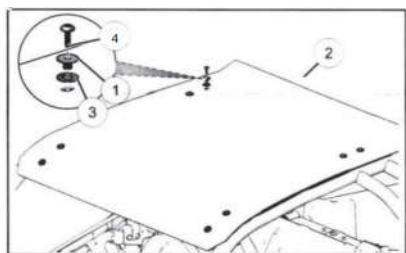

6. Tighten the allen bolts of 8 holes at the same time. Installation complete.

